
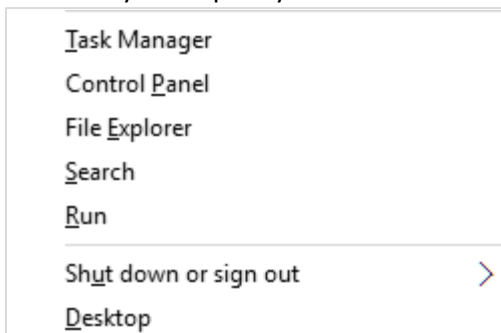 





Setting the “Pop Drawer” option on receipt printers - Windows 10

Visual Anthology uses the printer driver to handle the cash drawer operations such as opening the drawer during a transaction. To set your printer to open your cash drawer you’ll need to complete the following steps.



1. Be sure your cash drawer is plugged into the printer
 - a. This cable resembles a phone cord.
2. To set these options go to hold down the WinKey  and press X. This brings up a menu that will allow you to quickly choose “Control Panel”. Please select this option.



 3. Locate the printer’s icon and right click to show the popup menu.

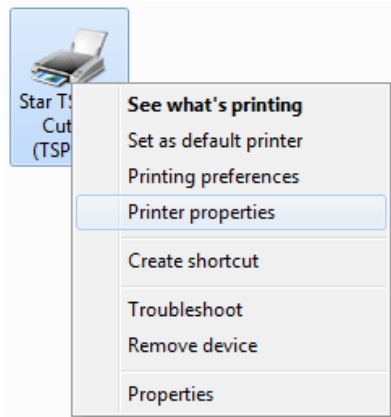

  4. Choose Printer properties
5. Choose the Device Settings tab
 - a. There are two possible screens depending on which exact model you are using and the OS it is installed on.
 - b. The Cash Drawer 1 - Set its pull down value to “open before printing”.
 - c. Peripheral 1 - Set its pull down value to “document top”.

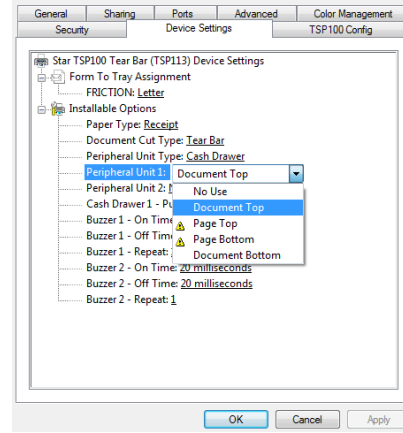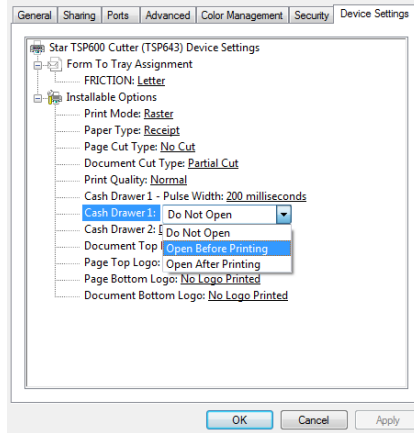

6. Apply the changes
7. Choose Ok