

Overview:

This document provides the steps necessary to calibrate your Advantage DLX barcode printer.

- 1. Click the Start button
- 2. Choose Devices & Printers from the expanded menu
- 3. Once this screen opens locate the Advantage DLX icon



- 4. Right click the icon
- 5. Choose Printer Properties





c. And then More Settings

ି ମ	oring Graphic
I I	ASH
•	More Settings
ancel	Apply Help

- 6. This tab contains an button to Calibrate
- 7. Select this option

Ethernet Set	tup				
IP :	0.0.0.0	DHCP :	On	© Off	
Subnet :	0.0.0.0	LPD :	On	© Off	
Gateway :	0.0.0.0	RTEL :) On	© Off	
		Port :			
Send Ethemet Data to Printer					
Actions —	4" Test	2" 1	lest 🛛	Self-Test	
				Calibrate	
Store Variable Settings into Printer					