

# GoDex – Setting vertical and horizontal alignment

CUSTOMER DOCUMENT  
REVISED 4 OCT 2017

- Open Control Panel
- Next choose Printers & Devices
- Locate the GoDex printer in the list, right click and choose Printer Properties
- On that screen choose Printer Defaults
- And then choose Advanced Options

In the Position Alignment section, you can change the values to increase the distance from the edge to where the printing begins. There is a fixed gutter on the left of the label. Entering a negative number here will not remove this gutter.

