

# Install and Configure your Pole Display

---

Your pole display should have come with a CD (mini CD) to install the driver.


**IMPORTANT: Do not connect the Pole Display until after you have installed the driver.**

- Place the CD in the drive
- Install the driver
- Reboot the computer (turn off for 30 seconds)
- Attach the Pole Display to a power source - you should see it display a message. This lets you know the display is working.
- Attach the USB cable to the computer and the Pole Display
- The Pole Display should be found automatically and will be displayed in your “Devices and Printers” screen.

## Now we need to tell Visual Anthology where it is

The pole display needs to be assigned to a specific com port. When you have followed the steps above the new hardware will be displayed in the Start → Devices and Printers screen. The name that has been assigned will contain the port to which it is assigned (e.g. COM 4, COM9, etc.). You’ll need this number.

1. Click the Windows Start button
2. Choose the Devices and Printers button

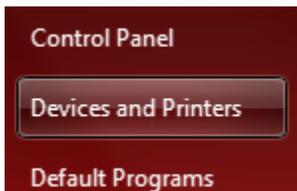

3. Locate the Pole Display on the screen and note the name (the COM port).
4. Close out of this screen
5. Open Visual Anthology
6. Choose Master Files → Stations
  - a. At the bottom of the screen choose COM port number you noted above and then choose PD1200.

Pole display Comm port  Pole display device

7. Save your changes.