 
 


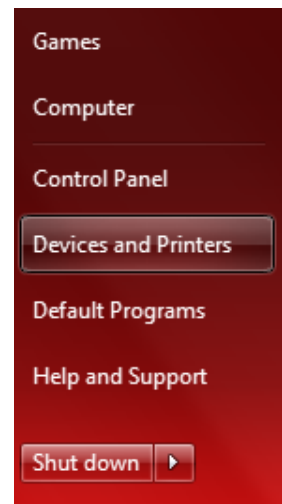



Setting the “Pop Drawer” option on receipt printers - Windows 7

Visual Anthology uses the printer driver to handle the cash drawer operations such as opening the drawer during a transaction. To set your printer to open your cash drawer you’ll need to complete the following steps.

1. Be sure your cash drawer is plugged into the printer
 - a. This cable resembles a phone cord.
2. To set this option go to Start → Devices and Printers
3. Locate the printer’s icon and right click to show the popup menu.

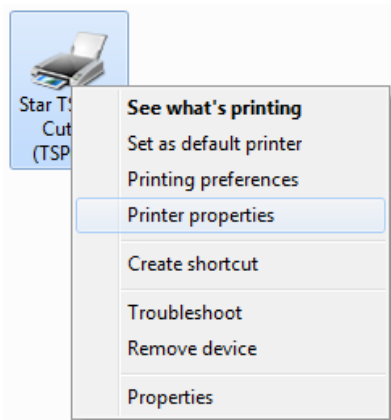

  4. Choose Printer properties
5. Choose the Device Settings tab
 - a. There are two possible screens depending on which exact model you are using and the OS it is installed on.
 - b. The Cash Drawer 1 - Set its pull down value to “open before printing”.
 - c. Peripheral 1 - Set its pull down value to “document top”.

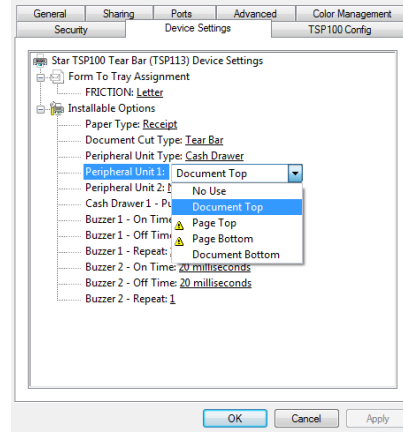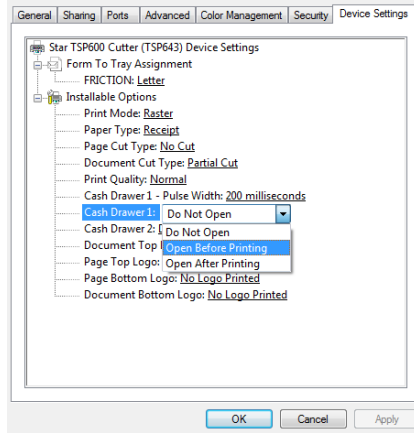

6. Apply the changes
7. Choose Ok